Division of APREL Laboratories.

## **Dipole Calibration Results**

#### **Mechanical Verification**

APREL	APREL	Measured	Measured
Length	Height	Length	Height
161.0 mm	89.8 mm	162.2 mm	89.4 mm

## **Electrical Verification**

Tissue Type	Return Loss:	SWR:	Impedance:
Head	-30.344 dB	1.066 U	49.001Ω
Body	-28.118 dB	1.089 U	53.117 Ω 🗆

#### **Tissue Validation**


	Dielectric constant, er	Conductivity, o [S/m]
Head Tissue 835MHz	43.42	0.94
Body Tissue 835MHz	55.77	1.01


This page has been reviewed for content and attested to by signature within this document.

Division of APREL Laboratories.

The Following Graphs are the results as displayed on the Vector Network Analyzer.

#### S11 Parameter Return Loss

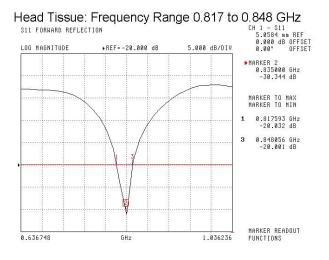


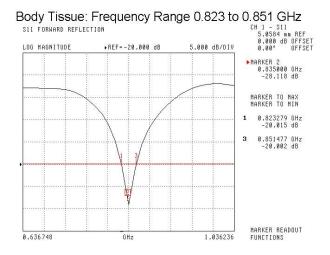


This page has been reviewed for content and attested to by signature within this document.

Division of APREL Laboratories.



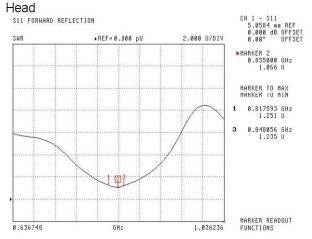


#### Body

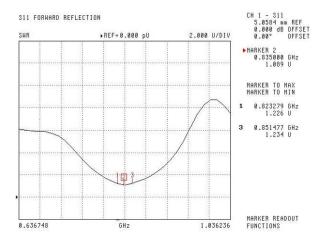


This page has been reviewed for content and attested to by signature within this document.

Division of APREL Laboratories.

## **Smith Chart Dipole Impedance**

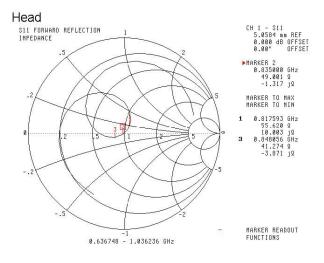

Body

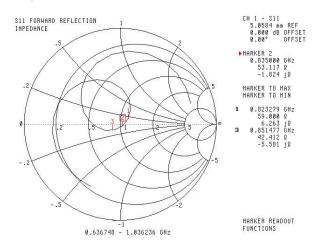

This page has been reviewed for content and attested to by signature within this document.

Division of APREL Laboratories.

## **Test Equipment**

The test equipment used during Probe Calibration, manufacturer, model number and, current calibration status are listed and located on the main APREL server R:\NCL\Calibration Equipment\Instrument List 2014.

This page has been reviewed for content and attested to by signature within this document.

## NCL CALIBRATION LABORATORIES

Calibration File No: DC-1531 Project Number: BACL-5745

# CERTIFICATE OF CALIBRATION

It is certified that the equipment identified below has been calibrated in the NCL CALIBRATION LABORATORIES by qualified personnel following recognized procedures and using transfer standards traceable to NRC/NIST.

BACL Head & Body Validation Dipole

Manufacturer: APREL Laboratories Part number: ALS-D-1750-S-2 Frequency: 1750 MHz Serial No: 198-00304

Customer: ISL

Calibrated: 8th October, 2013 Released on: 8th October, 2013

This Calibration Certificate is Incomplete Unless Accompanied with the Calibration Results Summary

Released By:

Art Brennan, Quality Manager

CALIBRATION LABORATORIES Suite 102, 303 Terry Fox Dr, OTTAWA, ONTARIO CANADA K2K 3J1

Division of APREL Lab. TEL: (613) 435-8300 FAX: (613) 435-8306

Division of APREL Laboratories.

### Conditions

Dipole 198-00304 was an original calibration.

Ambient Temperature of the Laboratory:22 °C +/- 0.5°CTemperature of the Tissue:21 °C +/- 0.5°C

We the undersigned attest that to the best of our knowledge the calibration of this subject has been accurately conducted and that all information contained within the results pages have been reviewed for accuracy.

Art Brennan, Quality Manager

**Constantin Teodorian, Test Engineer** 

This page has been reviewed for content and attested to by signature within this document.

Division of APREL Laboratories.

## **Calibration Results Summary**

The following results relate the Calibrated Dipole and should be used as a quick reference for the user.

#### **Mechanical Dimensions**

Length:	75 mm
Height:	42 mm


#### **Electrical Calibration**


Test	Result Head	Result Body
S11 R/L	-25.567	-20.548 dB
SWR	1.111U	1.207 U
Impedance	53.637Ω	55.929 Ω

#### System Validation Results, 1750 MHz

	1g	10g
Head	37.02	18.99
Body	36.65	18.85

Туре	Epsilon	Sigma	
Head	38.51	1.36	
Body	51.79	1.53	

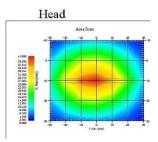

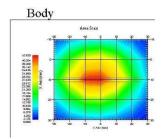

This page has been reviewed for content and attested to by signature within this document.

Division of APREL Laboratories.

#### Introduction

This Calibration Report has been produced in line with the SSI Dipole Calibration Procedure SSI-TP-018-ALSAS. The results contained within this report are for Validation Dipole. The calibration routine consisted of a three-step process. Step 1 was a mechanical verification of the dipole to ensure that it meets the mechanical specifications. Step 2 was an Electrical Calibration for the Validation Dipole, where the SWR, Impedance, and the Return loss were assessed. Step 3 involved a System Validation using the ALSAS-10U, along with APREL E-030 130 MHz to 26 GHz E-Field Probe Serial Number 215.

#### References

SSI-TP-018-ALSAS Dipole Calibration Procedure

SSI-TP-016 Tissue Calibration Procedure

IEEE 1528 "Recommended Practice for Determining the Peak Spatial-Average Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques"

IEC-62209 "Human exposure to radio frequency fields from hand-held and bodymounted wireless communication devices – Human models, instrumentation, and procedures"

Part 1: "Procedure to determine the Specific Absorption Rate (SAR) for hand-held devices used in close proximity of the ear (frequency range of 300 MHz to 3 GHz)"

IEC-62209 "Human exposure to radio frequency fields from hand-held and bodymounted wireless communication devices – Human models, instrumentation, and procedures"

Part 2 *Draft*: "Procedure to determine the Specific Absorption Rate (SAR) for handheld devices used in close proximity of the ear (frequency range of 30 MHz to 6 GHz)"

#### Conditions

Ambient Temperature of the Laboratory:22 °C +/- 0.5°CTemperature of the Tissue:20 °C +/- 0.5°C

This was an original calibration taken from stock.

#### **Dipole Calibration uncertainty**

The calibration uncertainty for the dipole is made up of various parameters presented below.

Mechanical	1%
Positioning Error	1.22%
Electrical	1.7%
Tissue	2.2%
Dipole Validation	2.2%
TOTAL	8.32% (16.64% K=2)

This page has been reviewed for content and attested to by signature within this document.

Division of APREL Laboratories.

## **Dipole Calibration Results**

## **Mechanical Verification**

Measured	Measured
Length	Height
75 mm	42 mm

#### **Tissue Validation**

Frequency	Permittivity E	Conductivity O
1750 Head	38.23	1.38
1750 Body	52.86	1.54

This page has been reviewed for content and attested to by signature within this document.


Division of APREL Laboratories.

#### **Electrical Calibration**

Test	Result Head	Result Body
S11 R/L	-25.567	-20.548 dB
SWR	1.111U	1.207 U
Impedance	53.637Ω	55.929 Ω

The Following Graphs are the results as displayed on the Vector Network Analyzer. S11 Parameter Return Loss

Head

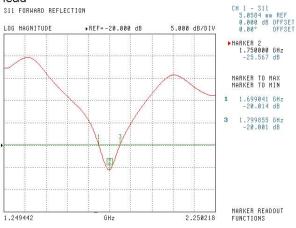







This page has been reviewed for content and attested to by signature within this document.

Division of APREL Laboratories.

SWR

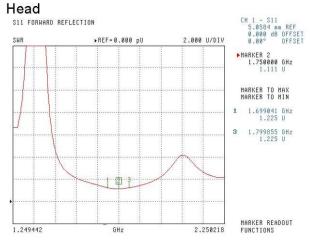


Body

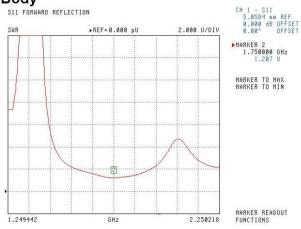

This page has been reviewed for content and attested to by signature within this document.

Division of APREL Laboratories.

## **Smith Chart Dipole Impedance**

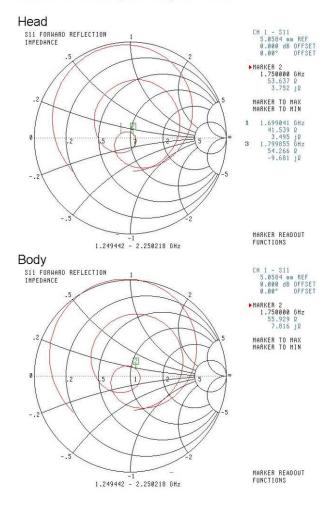

This page has been reviewed for content and attested to by signature within this document.

Division of APREL Laboratories.

## **Test Equipment**

.

The test equipment used during Probe Calibration, manufacturer, model number and, current calibration status are listed and located on the main APREL server R:\NCL\Calibration Equipment\Instrument List May 2013

This page has been reviewed for content and attested to by signature within this document.

## NCL CALIBRATION LABORATORIES

Calibration File No: DC-1601 Project Number: BAC-dipole -cal-5779

## CERTIFICATE OF CALIBRATION

It is certified that the equipment identified below has been calibrated in the NCL CALIBRATION LABORATORIES by qualified personnel following recognized procedures and using transfer standards traceable to NRC/NIST.

Validation Dipole (Head & Body)

Manufacturer: APREL Laboratories Part number: ALS-D-1900-S-2 Frequency: 1900 MHz Serial No: 210-00710

Customer: Bay Area Compliance Laboratory (China)

Calibrated: 9<sup>th</sup> October, 2014 Released on: 9<sup>th</sup> October, 2014

This Calibration Certificate is Incomplete Unless Accompanied with the Calibration Results Summary

Released By:

Art Brennan, Quality Manager



Division of APREL Lab. TEL: (613) 435-8300 FAX: (613)435-8306

Division of APREL Laboratories.

#### Conditions

Dipole 210-00710 was received in good condition and was a re-calibration.

Ambient Temperature of the Laboratory:	22 °C +/- 0.5°C
Temperature of the Tissue:	21 °C +/- 0.5°C

#### Attestation

The below named signatories have conducted the calibration and review of the data which is presented in this calibration report.

We the undersigned attest that to the best of our knowledge the calibration of this subject has been accurately conducted and that all information contained within the results pages have been reviewed for accuracy.

Art Brennan, Quality Manager

Maryna Nesterova Calibration Engineer

#### **Primary Measurement Standards**

Instrument Tektronix USB Power Meter Network Analyzer Anritsu 37347C Serial Number 11C940 002106 Cal due date May 14, 2015 Feb. 20, 2015

This page has been reviewed for content and attested to by signature within this document.

Division of APREL Laboratories.

### **Calibration Results Summary**

The following results relate the Calibrated Dipole and should be used as a quick reference for the user.

#### **Mechanical Dimensions**


Length:	67.1 mm
Height:	38.9 mm

#### **Electrical Specification**

Tissue	Frequency	SWR:	Return Loss	Impedance
Head	1900MHz	1.084 U	-27.92 dB	52.247 Ω
Body	1900MHz	1.128 U	-24.40 dB	52.618 Ω

#### **System Validation Results**

Tissue	Frequency	1 Gram	10 Gram	Peak
Head	1900 MHz	39.481	20.44	73.364
Body	1900 MHz	39.715	20.552	73.565

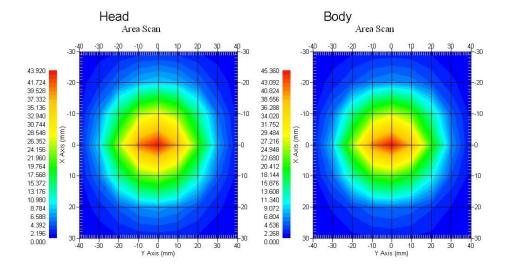

This page has been reviewed for content and attested to by signature within this document.

Division of APREL Laboratories.

### Introduction

This Calibration Report has been produced in line with the SSI Dipole Calibration Procedure SSI-TP-018-ALSAS. The results contained within this report are for Validation Dipole 210-00710. The calibration routine consisted of a three-step process. Step 1 was a mechanical verification of the dipole to ensure that it meets the mechanical specifications. Step 2 was an Electrical Calibration for the Validation Dipole, where the SWR, Impedance, and the Return loss were assessed. Step 3 involved a System Validation using the ALSAS-10U, along with APREL E-020 30 MHz to 6 GHz E-Field Probe Serial Number 225.

#### References

- IEC-62209 "Human exposure to radio frequency fields from hand-held and bodymounted wireless communication devices – Human models, instrumentation, and procedures"
- Part 2: "Procedure to determine the Specific Absorption Rate (SAR) for handheld devices used in close proximity of the ear (frequency range of 30 MHz to 6 GHz)"
- TP-D01-032-E020-V2 E-Field probe calibration procedure
- D22-012-Tissue dielectric tissue calibration procedure
- D28-002-Dipole procedure for validation of SAR system using a dipole
- IEEE 1309 Draft Standard for Calibration of Electromagnetic Field Sensors and Probes, Excluding Antennas, from 9kHz to 40GHz

### Conditions

Dipole 210-00710 was a recalibration.

Ambient Temperature of the Laboratory:	22 °C +/- 0.5°C
Temperature of the Tissue:	20 °C +/- 0.5°C

#### **Dipole Calibration uncertainty**

The calibration uncertainty for the dipole is made up of various parameters presented below.

Mechanical	1%
Positioning Error	1.22%
Electrical	1.7%
Tissue	2.2%
Dipole Validation	2.2%
TOTAL	8.32% (16.64% K=2)

This page has been reviewed for content and attested to by signature within this document.

Division of APREL Laboratories.

## **Dipole Calibration Results**

#### Mechanical Verification

APREL	APREL	Measured	Measured
Length	Height	Length	Height
68.0 mm	39.5 mm	67.1mm	38.9 mm

### **Electrical Validation**

Tissue	Frequency	SWR:	Return Loss	Impedance
Head	1900MHz	1.084 U	-27.92 dB	52.247 Ω
Body	1900MHz	1.128 U	-24.40 dB	52.618 Ω

#### **Tissue Validation**


	Dielectric constant, εr	Conductivity, o [S/m]
Head Tissue 1900MHz	40.20	1.38
Body Tissue 1900MHz	52.63	1.46


This page has been reviewed for content and attested to by signature within this document.


Division of APREL Laboratories.

The Following Graphs are the results as displayed on the Vector Network Analyzer.

#### S11 Parameter Return Loss

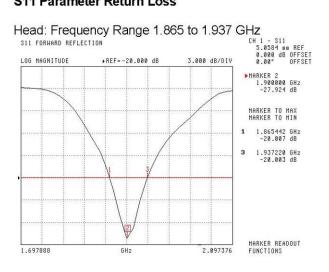



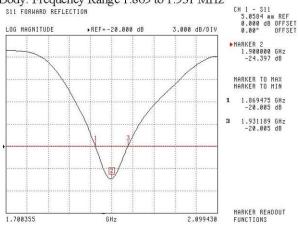


This page has been reviewed for content and attested to by signature within this document.


Division of APREL Laboratories.

#### SWR



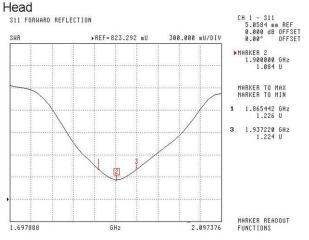


#### Body

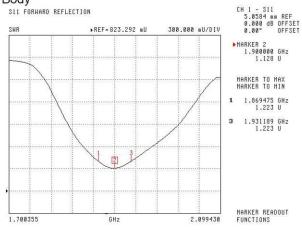


This page has been reviewed for content and attested to by signature within this document.



#### NCL Calibration Laboratories Division of APREL Laboratories.

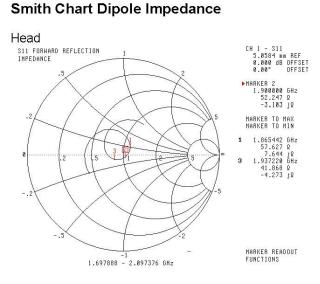

Body

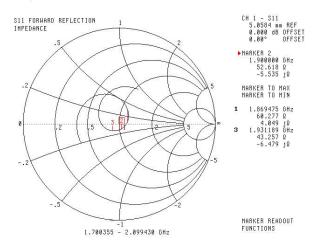

This page has been reviewed for content and attested to by signature within this document.


Division of APREL Laboratories.

## **Test Equipment**

The test equipment used during Probe Calibration, manufacturer, model number and, current calibration status are listed and located on the main APREL server R:\NCL\Calibration Equipment\Instrument List 2014

This page has been reviewed for content and attested to by signature within this document.

## **APPENDIX D EUT TEST POSITION PHOTOS**

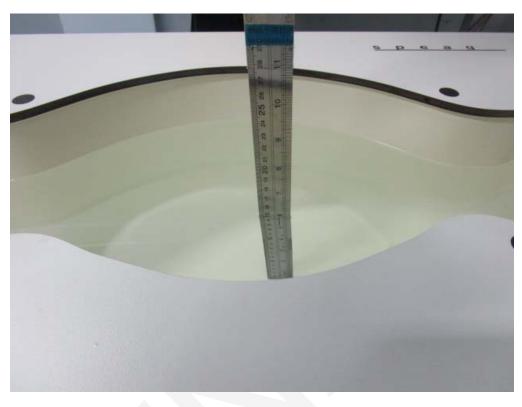

## Liquid depth $\geq$ 15cm

## **Body-worn Back Setup Photo**




## Left Head Touch Setup Photo



Left Head Tilt Setup Photo



## **Right Head Touch Setup Photo**

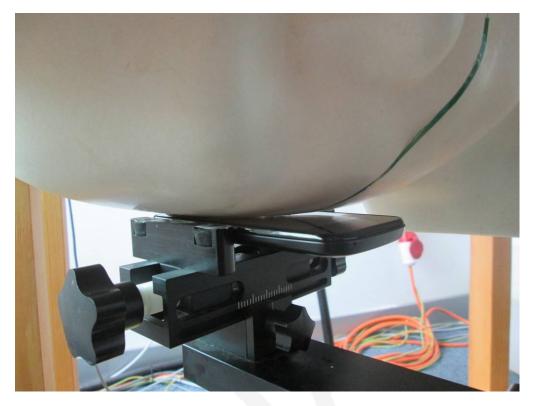

**Right Head Tilt Setup Photo** 



## **APPENDIX E EUT PHOTOS**



## **EUT – Back View**



SAR Evaluation Report

EUT – Left View



**EUT – Right View** 



EUT – Top View



**EUT – Bottom View** 





EUT – Cover off View

## **APPENDIX F INFORMATIVE REFERENCES**

[1] Federal Communications Commission, \Report and order: Guidelines for evaluating the environmental effects of radiofrequency radiation", Tech. Rep. FCC 96-326, FCC, Washington, D.C. 20554, 1996.

[2] David L. Means Kwok Chan, Robert F. Cleveland, \Evaluating compliance with FCC guidelines for human exposure to radiofrequency electromagnetic fields", Tech. Rep., Federal Communication Commission, O\_ce of Engineering & Technology, Washington, DC, 1997.

[3] Thomas Schmid, Oliver Egger, and Niels Kuster, \Automated E-\_eld scanning system for dosimetric assessments", IEEE Transactions on Microwave Theory and Techniques, vol. 44, pp. 105{113, Jan. 1996.

[4] Niels Kuster, Ralph K.astle, and Thomas Schmid, \Dosimetric evaluation of mobile communications equipment with known precision", IEICE Transactions on Communications, vol. E80-B, no. 5, pp. 645{652, May 1997.

[5] CENELEC, \Considerations for evaluating of human exposure to electromagnetic fields (EMFs) from mobile telecommunication equipment (MTE) in the frequency range 30MHz - 6GHz", Tech. Rep., CENELEC, European Committee for Electrotechnical Standardization, Brussels, 1997.

[6] ANSI, ANSI/IEEE C95.1-1992: IEEE Standard for Safety Levels with Respect to Human Exposure to Radio Frequency Electromagnetic Fields, 3 kHz to 300 GHz, The Institute of Electrical and Electronics Engineers, Inc., New York, NY 10017, 1992.

[7] Katja Pokovic, Thomas Schmid, and Niels Kuster, \Robust setup for precise calibration of E-field probes in tissue simulating liquids at mobile communications frequencies", in ICECOM \_ 97, Dubrovnik, October 15{17, 1997, pp. 120-24.

[8] Katja Pokovic, Thomas Schmid, and Niels Kuster, \E-field probe with improved isotropy in brain simulating liquids", in Proceedings of the ELMAR, Zadar, Croatia, 23 {25 June, 1996, pp. 172-175.

[9] Volker Hombach, Klaus Meier, Michael Burkhardt, Eberhard K. uhn, and Niels Kuster, \The depen-dence of EM energy absorption upon human head modeling at 900 MHz", IEEE Transactions on Microwave Theory and Techniques, vol. 44, no. 10, pp. 1865-1873, Oct. 1996.

[10] Klaus Meier, Ralf Kastle, Volker Hombach, Roger Tay, and Niels Kuster, \The dependence of EM energy absorption upon human head modeling at 1800 MHz", IEEE Transactions on Microwave Theory and Techniques, Oct. 1997, in press.

[11] W. Gander, Computermathematik, Birkhaeuser, Basel, 1992.

[12] W. H. Press, S. A. Teukolsky, W. T. Vetterling, and B. P. Flannery, Numerical Receptes in C, The Art of Scientific Computing, Second Edition, Cambridge University Press, 1992. Dosimetric Evaluation of Sample device, month 1998 9

[13] NIS81 NAMAS, \The treatment of uncertainity in EMC measurement", Tech. Rep., NAMAS Executive, National Physical Laboratory, Teddington, Middlesex, England, 1994.

[14] Barry N. Taylor and Christ E. Kuyatt, \Guidelines for evaluating and expressing the uncertainty of NIST measurement results", Tech. Rep., National Institute of Standards and Technology, 1994. Dosimetric Evaluation of Sample device, month 1998 10.

## **PRODUCT SIMILARITY DECLARATION LETTER**

Advanced Technologies SRL Address: Ion Heliade Radulescu nr 26, Bucharest 021255, ROMANIA Tel: +40 (21) 569 85 33/34 Fax: +40 (31) 814 61 12 E-mail: marius.chirca@advanced.ro

2016-3-30

## **Product Similarity Declaration**

To Whom It May Concern,

We, Advanced Technologies SRL, hereby declare that we have a product named as Smartphone Xylo (Model number: Xylo Q) was tested by BACL, meanwhile, for our marketing purpose, we would like to list a series models (Xylo X) on reports and certificate. the difference of these models is the memory of flash, since the model Xylo Q is 512M and Xylo X is 1G. The pixels of camera are different since Xylo Q is equipped with 200W and Xylo X is equipped with 500W. No other changes are made to them. We confirm that all information above is true, and we'll be responsible for all the consequences. Please contact me if you have any question.

Signature:

reprins Marius

Purchasing Manager

\*\*\*\*\* END OF REPORT \*\*\*\*\*